

# REPORT DOCUMENTATION PAGE

AFRL-SR-AR-TR-04-

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or on this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports 4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to provide information unless it is specifically required by law. PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.

ing the  
ducing  
202-  
urrently

1. REPORT DATE (DD-MM-YYYY)  
30-04-2004

2. REPORT TYPE  
~~Progress~~ Final Report

3. DATES COVERED (From - To)  
15-08-02 to 14-11-03

## 4. TITLE AND SUBTITLE

Sub 50nm Critical Dimension Lithography using Surface Plasmon

Enhanced Illumination

5a. CONTRACT NUMBER

5b. GRANT NUMBER  
F49620-02-1-0422

5c. PROGRAM ELEMENT NUMBER

5d. PROJECT NUMBER

5e. TASK NUMBER

5f. WORK UNIT NUMBER

## 6. AUTHOR(S)

Dale Larson

## 7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)

Harvard Medical School  
25 Shattuck Street  
Boston, MA 02115

## 8. PERFORMING ORGANIZATION REPORT NUMBER

## 9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES)

DARPA/MTO (sponsoring) AFOSR (monitoring)  
3701 N. Fairfax Drive 4015 Wilson Blvd, Rm 713  
Arlington, VA 22203 Arlington, VA 22203

## 10. SPONSOR/MONITOR'S ACRONYM(S)

## 11. SPONSOR/MONITOR'S REPORT NUMBER(S)

## 12. DISTRIBUTION / AVAILABILITY STATEMENT

Distribution A: unlimited *NE*

## 13. SUPPLEMENTARY NOTES

## 14. ABSTRACT

Surface plasmon enhanced illumination is a photonics device that creates a nanometric source of bright propagating light. This light source serves as the basis for a direct write maskless photolithography system. The key progress made on this project is the demonstration of lateral resolution less than 50nm. The lateral resolution corresponds directly to feature size when patterning a photoresist.

20040604 100

## 15. SUBJECT TERMS

## 16. SECURITY CLASSIFICATION OF: none

a. REPORT

b. ABSTRACT

c. THIS PAGE

## 17. LIMITATION OF ABSTRACT

## 18. NUMBER OF PAGES

10

## 19a. NAME OF RESPONSIBLE PERSON

19b. TELEPHONE NUMBER (include area code)

## Accomplishments

The key accomplishments made on this grant are:

- Fabrication of surface plasmon enhanced illumination devices (SPEI) on the end of a cone polished optical fiber with 40nm diameter apertures. These devices were made with bulls' eye patterns and with hexagonal arrays of apertures.
- SPEI device test results indicate that SPEI has great promise as a lithography technology for direct write systems.
  - The above devices were used to demonstrate lateral resolution of less than 50nm well outside of the near-field.
  - The emission from the devices is semicollimated with a full angle divergence of ~0.5 degree.
  - Concentration of the optical flux of 3x was achieved.
- An improved stage (stepper) has been created for use with SPEI devices. It has not been tested as of the conclusion of this grant.
- A breadboard stepper was designed and fabricated.
- SPEI devices were made for use at 257nm by ETEC in their multibeam system for the creation of masks using electron beam technology. The preliminary results from these devices indicate that the optical flux is enhanced versus unaided apertures and that the ETEC system is less sensitive to variation in the beam location when using the SPEI devices than when using their current system.

The PowerPoint material presented at the Las Vegas Advanced Lithography Program Review meeting are incorporated below to provide more detail on these accomplishments.

### Publications:

- Stark, P. R. H., Rinko, L. R. & Larson, D. N. Fluorescent Resolution Target for Super Resolution Microscopy. J. Microscopy 212, 307-310 (2003).
- A poster has been accepted for the work with ETEC for the EIPBN conference in early June 2004.
- Mr. Larson is an invited speaker at the EIPBN conference in early June 2004.

Patents: No patents have been filed based on the work on this grant.

## Maskless Lithography with Surface Plasmon Enhanced Illumination

Presented to DARPA ALP

Las Vegas

February 4, 2004

Channing Moore, Peter Stark and Dale Larson

Technology Engineering Center

Harvard Medical School



### Characteristics of SPEI devices critical to lithography are:

- Small illumination spot diameter:  $<50\text{nm}$  has been demonstrated with a  $40\text{nm}$  aperture and  $5\text{-}10\text{nm}$  apertures are possible w/current mfg methods.
- Emitted light is propagating, not evanescent
- Up to 3x concentration of the transmitted light has been achieved.
- Illumination spot size is independent of wavelength. Devices for  $257\text{nm}$ ,  $405\text{nm}$  and  $558\text{nm}$  have been made.
- SPEI technology is compatible with immersion lithography.

## Surface Plasmons?

- Surface Plasmons (SPs) are collective oscillations of electrons in a material (usually a metal) confined to the surface of that material and the space immediately adjacent.
  - In materials displaying metallic behavior, valence electrons behave as a gas and are free to move about spatially without regard to nuclei locations.
  - SPs are similar to bulk plasmons but are of a different frequency due to damping by the surrounding material.

## SPEI architecture

Single hole in a conductor


Multiple resonant holes in a monometallic film

$$a_0 = \lambda(\epsilon_1 + \epsilon_2)/\epsilon_1 \epsilon_2^{1/2} \zeta$$


where  $\zeta$  is an integer

The images in this slide are animations that are incompatible with printed formats. Short summaries of each animation are provided below.

- Single hole in a metal film (upper left hand corner) represents a single unaided aperture. In this situation the majority of the light is reflected and a very small portion ( $10^{-7}$ ) is transmitted as evanescent light. An example of this case is a near-field scanning optical microscopy probe.
- Multiple holes in a monometallic film can be placed such that photons are able to couple to plasmons via grating momentum. This architecture achieves extraordinary levels of transmission but the light is emitted from the surface and therefore this device does not result in a subwavelength light source.
- The SPEI architecture uses the same phenomenon as the previous architecture but the device is designed such that the coupling conditions on the emission surface are very different from the coupling conditions on the illumination surface. This results in the emitted light being constrained to the aperture, thus creating a subwavelength light source that also has high optical transmission.

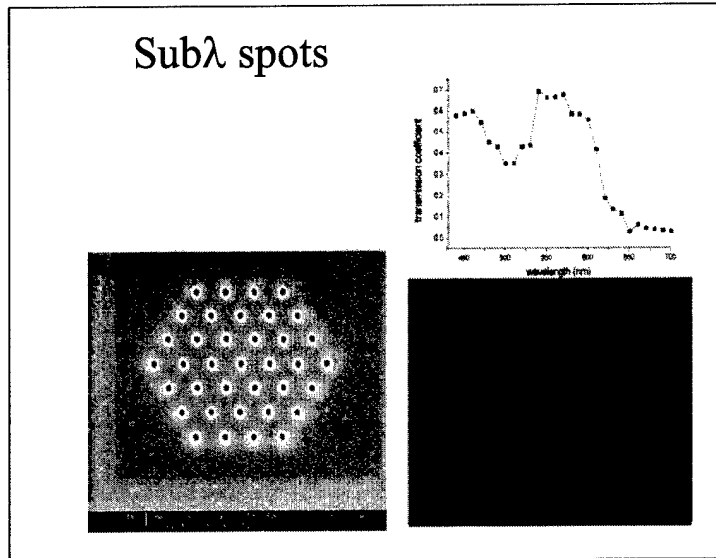


An ion image of an hexagonal SPEI array of 150nm apertures, with a transmission spectrum and an image of the emitted light.

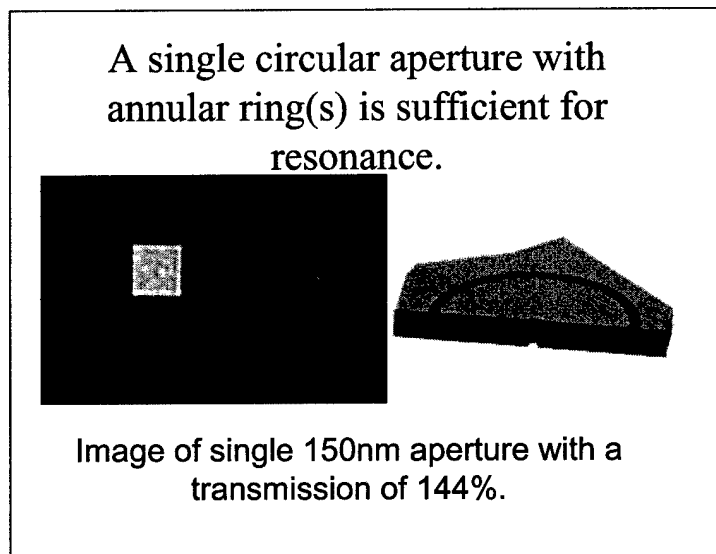


SPEI devices can also be made such that there is a single emitting aperture in the device. For a full scale photolithography system an array of these devices would be fabricated on a solid substrate and independently shuttered to write the pattern in parallel. Initial calculations indicate that an array of 40,000 such devices can pattern a 300mm wafer in ~45 minutes.

## SPEI Device Fabrication Process


1. Coat sapphire w/sacrificial layer of Al and cut annuli




2. Strip Al leaving annuli in the sapphire



3. Coat w/Al





4. Cut center aperture



This is the process used to fabricate the devices shown in the next slide.

## SPEI Probes

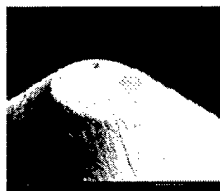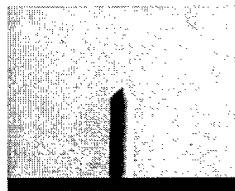


- 40nm apertures
- Used in our scanning experiments
- Fabricated on the end of truncated cone polished optical fibers

## Illumination Spot Size!

### Results:

- Scans located 95nm features on 100nm half pitch
- Scans with single aperture and multi-aperture probes reveal 52nm resolution at a distance of greater than 350nm from the target.
- These suggest a divergence from the aperture (40nm nominal) of less than 1degree half angle!

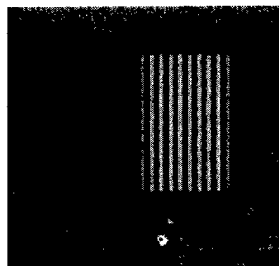


### Resolution Target:

Fluorescent polymer removed w/Ion beam milling to create 100nm wide grooves on 195nm centers.

*J. Microscopy*, 212, pp 307-310.

## Summary of Scan Data

- 95nm features separated by 100nm resolved
- Fast Fourier Transform of single aperture scan indicates a <50nm illumination spot size
- Fit with simulation for hex array scan indicates a 52nm illumination spot size at distance greater than 350nm
- Fast Fourier Transform of hex array scan indicates a <50nm illumination spot size
- Divergence angle is ~0.5 degree (full angle)

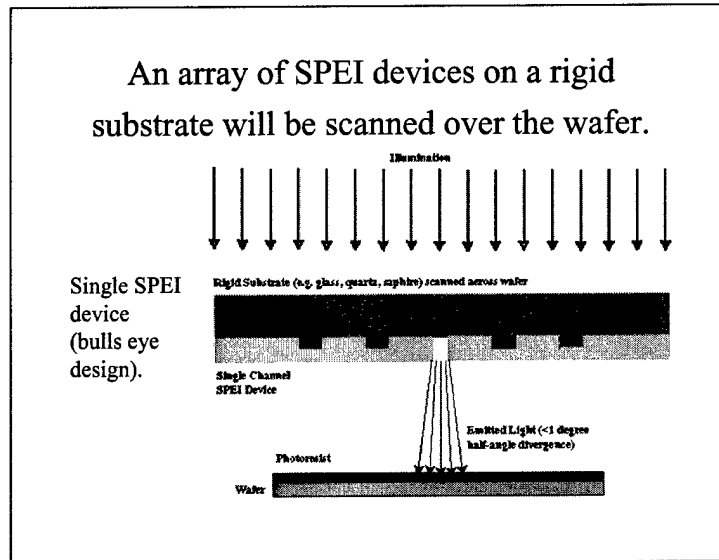

An array of these devices will be fabricated on a solid substrate which will be scanned over the wafer with the emission from each device shuttered on/off to write the pattern.

## Use of SPEI for Mask Making

- Collaboration with ETEC established to evaluate the use of SPEI devices in their multi-ebeam system.
- Objectives:
  - to address impact of beam walk
  - to create smaller electron beams

The ETEC system is currently susceptible to positional drift of the illumination beam. The hypothesis is that using SPEI devices will desensitize the system to this variation because the SPEI device will “collect” photons over a large area and channel them through the emitting aperture in a bulls’ eye pattern device (see slide 8, the image in the upper left hand corner and slide 13 below). Additional proposed benefits for using the SPEI device in this setting are the ability to excite electrons on the electron emitter material at a smaller diameter thereby reducing the focusing required from the electron optics, and increasing the intensity with the “photonics funnel” effect to achieve a higher density of electrons and therefore a faster writing rate.




### Ion image of a SPEI device for ETEC

35nm thick coating  
of Al on sapphire  
blank

$a_0=224\text{nm}$ , designed  
for 257nm  
illumination

Annuli 100nm wide

Central aperture  
100nm diameter

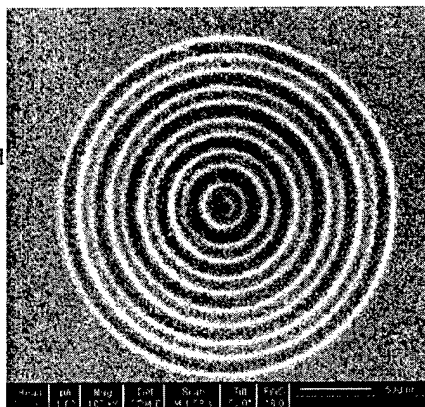

### Preliminary results are encouraging.

- ETEC data show that output is less sensitive to beam walk.
- More light than expected from diffraction theory is emitted from the subwavelength SPEI apertures.

### Next steps with ETEC

- ETEC currently examining the SPEI devices using SEM
- Coat SPEI devices with photoemitter and evaluate the resulting electron beams
- More devices will be made as necessary

### Next Steps

- Short-term:
  - Repeat the illumination spot diameter experiment (new stage and resolution target designs)
  - Contact holes in h-line resist
  - Continued support of ETEC
- Long-term:
  - More patterns
  - Assess process latitude
  - Improved SPEI devices
  - Scale-up issues